

## CS4 Gourmet Candy Shoppe Parts List/Diagram

Diagram	Part Number	Description
1, 2	VMX-10-100-x- <i>nnn</i>	Lockset (Top Cap & Cash Drawers)
3	CS4-01-010	Top Cap
4	CS4-02-001	Globe
5	CS4-02-100	Deep Dish Product Brush-Off Plate
6	CS4-02-101	Deep Dish Adjustment Plate
7	CS4-02-102	Deep Dish Adjustable Wheel
8	CS4-02-002	Hopper Base
9	CS4-01-011	Body Ring
10	CS4-01-012-BL	Body Panel - Blank Side
11	CS4-01-013	Central Rod
12	CS4-01-014	Removable Cash Drawer
13	CS4-01-016	Cash Drawer Rod Support
14	CS4-01-015	Cash Drawer Rod
15	CS4-01-017	Body Base
16	CS4-02-103	Bulk Wheel Brush-Off Plate
17	CS4-02-104	Bulk Wheel Agitator
18	CS4-02-105	Bulk Wheel Adjustment Plate
19	CS4-02-106	Adjustable Bulk Wheel
20	CS4-01-018	Coin Chute - Blank Side
21	CS4-01-019- <i>xxx</i>	Coin Mechanism (each)
22	CS4-01-020- <i>xxx</i>	Product Flap (each)
23	CS4-01-021	Coin Chute - Drawer Side
24	CS4-01-022	Product Chute
25	CS4-01-012-DS	Body Panel - Cash Drawer
	CS4-01-012	Body Panels (set of four)
	CS4-01-023	Spill Trays w/Screws
	VMX-01-001	Sign Holders
	VMX-10-002	Product Scoops
	VMX-10-010	Route Mangement Software

